


USER'S MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'UTILISATION
MANUAL DE USUARIO
INSTRUKCJA OBSŁUGI
MANUALE D'USO

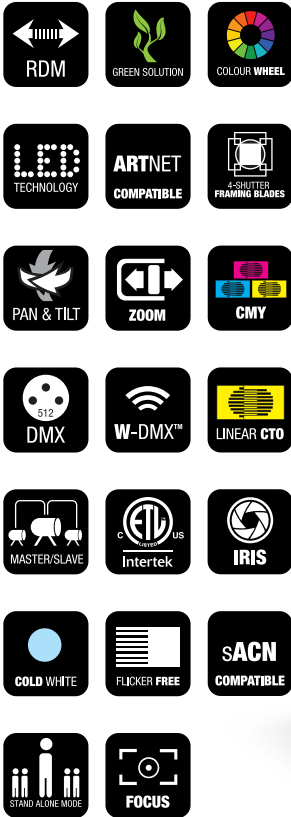

OPUS[®] X WASH

WASH MOVING HEAD
CLOXW

CONTENTS / INHALTSVERZEICHNIS / CONTENU / CONTENIDO / TREŚĆ / CONTENUTO

ENGLISH

SAFETY INFORMATION	3
INTRODUCTION	5
CONNECTIONS, OPERATING AND DISPLAY ELEMENTS	6
OPERATION	8
W-DMX™	10
W-DMX™ STATUS	10
CONTROL MENU (Control)	11
SYSTEM SETTINGS (Settings)	15
DEVICE INFORMATION (Info)	17
SERVICE MENU (Service)	18
QUICKLIGHT	19
HELP (Help menu)	19
SET-UP AND INSTALLATION	20
DMX TECHNOLOGY	21
TECHNICAL DATA	22
MANUFACTURER'S DECLARATIONS	23

DEUTSCH

SICHERHEITSHINWEISE	24
EINFÜHRUNG	26
ANSCHLÜSSE, BEDIEN- UND ANZEIGEELEMENTE	27
BEDIENUNG	29
W-DMX™	31
W-DMX™ STATUS	31
KONTROLLMENÜ (Control)	32
SYSTEMEINSTELLUNGEN (Settings)	36
GERÄTEINFORMATIONEN (Info)	38
SERVICE-MENÜ (Service)	39
QUICKLIGHT	40
HELP (Hilfemenü)	40
AUFSTELLUNG UND MONTAGE	41
DMX TECHNIK	42
TECHNISCHE DATEN	43
HERSTELLERERKLÄRUNGEN	44

FRANCAIS

MESURES PRÉVENTIVES	45
INTRODUCTION	47
RACCORDEMENTS, ÉLÉMENTS DE COMMANDE ET D'AFFICHAGE	48
MODE D'EMPLOI	50
W-DMX™	52
ÉTAT W-DMX™	52
PANNEAU DE COMMANDE (Control)	53
PARAMÈTRES DU SYSTÈME (Settings)	57
INFORMATIONS SUR L'APPAREIL (Info)	59
MENU DE SERVICE (Service)	61
QUICKLIGHT	62
HELP (Menu d'aide)	62
INSTALLATION ET MONTAGE	62
TECHNIQUE DMX	63
CARACTÉRISTIQUES TECHNIQUES	64
DECLARATIONS	65

ESPAÑOL

MEDIDAS DE SEGURIDAD	66
INTRODUCCIÓN	68
CONEXIONES, ELEMENTOS DE MANEJO Y ELEMENTOS	69
DE VISUALIZACIÓN	69
MANEJO	71
W-DMX™	73
ESTADO W-DMX™	73
MENÚ DE CONTROL (Control)	74
CONFIGURACIÓN DEL SISTEMA (Settings)	78
INFORMACIÓN DEL EQUIPO (Info)	80
MENÚ DE SERVICIO (Service)	81
QUICKLIGHT	82
HELP (menú de ayuda)	82
INSTALACIÓN Y MONTAJE	83
TECNOLOGÍA DMX	84
DATOS TÉCNICOS	85
DECLARACIÓN DEL FABRICANTE	86

POLSKI

ŚRODKI OSTROŻNOŚCI	87
WPROWADZENIE	89
PRZYŁĄCZA, ELEMENTY STERUJĄCE I WSKAZNIKI	90
OBŚLUGA	92
W-DMX™	94
STATUS W-DMX™	94
MENU STEROWANIA (Control)	98
USTAWIENIA SYSTEMU (Settings)	99
INFORMACJE O URZĄDZENIU (Info)	101
MENU SERWISOWE (Service)	102
QUICKLIGHT	103
HELP (Menu pomocy)	103
USTAWIANIE I MONTAŻ	104
DANE TECHNICZNE	105
DEKLARACJE PRODUCENTA	106

ITALIANO

MISURE PRECAUZIONALI	107
INTRODUZIONE	109
CONNESSIONI, ELEMENTI DI COMANDO E DI VISUALIZZAZIONE	110
UTILIZZO	112
W-DMX™	114
STATO W-DMX™	114
MENU DI CONTROLLO (Control)	115
IMPOSTAZIONI DI SISTEMA (Settings)	119
INFORMAZIONI SUL DISPOSITIVO (Info)	121
MENU ASSISTENZA (Service)	122
QUICKLIGHT	123
HELP (Menu Guida)	123
INSTALLAZIONE E MONTAGGIO	124
TECNOLOGIA DMX	125
DATI TECNICI	126
DICHIARAZIONI DEL PRODUTTORE	127

DMX

DMX CONTROL / DMX STEUERUNG / PILOTAGE DMX / CONTROL	
DMX / STEROWANIE DMX / CONTROLLO DMX	128

YOU HAVE MADE THE RIGHT CHOICE!

This device was developed and produced under the highest standards of quality in order to ensure smooth operation for many years. Please read these operating instructions carefully so that you can use your new Cameo Light product quickly and optimally. You can find more information on Cameo Light on our website WWW.CAMEOLIGHT.COM.

INTENDED USE!

The product is a device for event technology! The product has been specially developed for professional use in the area of event technology and is not suitable for use in a household setting! Furthermore, this product is only intended for qualified users with expertise in event technology! Use of the product contrary to the specified technical data and operating conditions is considered improper! Liability for damages or third-party damage to persons and property due to improper use is excluded!

SAFETY INFORMATION

1. Please read through these instructions carefully.
2. Store all information and instructions in a secure location.
3. Follow the instructions.
4. Heed all warnings. Do not remove any safety warnings or other information from the device.
5. Use the device only in the intended manner.
6. Use only stable and suitable stands and/or mounts (for fixed installations). Make sure that wall mounts are properly installed and secured. Make sure that the device is securely installed and will not fall.
7. During installation, heed all safety provisions that apply in your country.
8. Do not install and operate the device in the vicinity of heaters, heat reservoirs, ovens, or other heat sources. Make sure that the device is installed in such a way that it is sufficiently cooled and will not overheat.
9. Do not place any ignition sources, e.g. candles, on the device.
10. Do not block the ventilation slits.
11. The device was designed to be used only in interior spaces, do not operate the device in the direct vicinity of water (this does not apply to specialty outdoor devices - in this case, please note the special instructions given in the following). Do not bring the device into contact with combustible materials, fluids, or gases.
12. Make sure that no water can drop or splash into the device. Do not place any containers filled with fluids, such as vases or drinking vessels, onto the device.
13. Ensure that no objects can fall into the device.
14. Operate the device using only those accessories recommended and specified by the manufacturer.
15. Do not open the device, and do not modify it.
16. After connecting the device, inspect all cable paths in order to avoid damage or accidents, such as those caused by tripping over said cables.
17. During transport, ensure that the device will not fall and potentially cause material damage and personal harm.
18. If your device no longer functions properly, fluids or objects have made their way into the device interior, or the device is otherwise damaged, switch it off immediately and remove it from the power outlet (provided the device is active).
This device is to be repaired only by authorized specialists.
19. Use a dry towel to clean the device.
20. Follow all laws on disposal applicable in your country. Please separate plastic and paper or cardboard when disposing of the packaging.
21. Plastic bags must be kept out of reach of children.

FOR DEVICES CONNECTED TO A POWER SUPPLY:

22. **ATTENTION:** If the device power cable is equipped with a ground pin, it must be inserted into an outlet with a grounding conductor. Never disable the grounding conductor of a power cable.
23. Do not immediately switch on the device when it has been exposed to stark temperature deviations (for example after transport). Humidity and condensation could damage the device. Switch on the device only when it has reached room temperature.
24. Before you connect the device to the outlet, first ensure that voltage and frequency of the power supply complies with the values given on the device. If the device has a voltage selector switch, connect the device to the outlet only if the device values comply with the values of the power supply. If the provided power cable or power adapter does not fit your power outlet, contact an electrician.
25. Do not step on the power cable. Make sure that live cables, in particular those at the power socket or at the power adapter and the device socket, are not bent.
26. With regard to the device cables, always make sure that the power cable or power adapter is always freely accessible. Always separate the device from the power supply when the device is not in use or when you would like to clean the device. Always unplug the power cable and power adapter from the power outlet using the plug or adapter, not the cord. Never touch the power cable and power adapter with wet hands.
27. If possible, do not switch the device on and off quickly because this may impair the service life of the device.
28. **IMPORTANT INFO:** Replace fuses only with fuses of the same type and value. If a fuse trips repeatedly, please contact an authorized service center.
29. In order to completely separate the device from the power supply, remove the power cable or power adapter from the outlet.
30. If your device is equipped with a Volex power cord, release the correct Volex device connector before removing the cord. However, this also means that the device may slide and fall when removing the power cord, which may cause personal harm and/or material damage. Therefore, always lay cables carefully.
31. Remove the power cable and power adapter from the outlet when there is a risk of lighting or when you no longer want to use the device.
32. The device may only be installed when it carries no voltage (separate the power plug from the power supply).

33. Dust and other debris within the device may damage it. The device should be serviced or cleaned regularly by qualified specialists depending on the environmental conditions (dust, nicotine, smoke, etc.) in order to avoid overheating.
34. The distance to combustible materials must be at least 0.5 m.
35. Power cables for powering multiple devices must have a core cross-section of at least 1.5 mm². In the EU, lines must be H05VV-F or similar. Adam Hall provides suitable cables. Using these cables, you can connect multiple devices via the Power Out connection with the Power In connection of another device. Ensure that the total power consumption of all connected devices does not exceed the specified value (printed on the device). Be sure to keep power lines as short as possible.
36. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
37. Children must be instructed not to play with the device.
38. If the power cord of the device is damaged, do not use the device. The power cord must be replaced by an adequate cable or assembly from an authorized service center.

**CAUTION:**

To reduce the risk of electric shock, do not remove cover (or back). There are no user serviceable parts inside. Maintenance and repairs should be exclusively carried out by qualified service personnel.



The warning triangle with lightning symbol indicates dangerous uninsulated voltage inside the unit, which may cause an electrical shock.



The warning triangle with exclamation mark indicates important operating and maintenance instructions.



Warning! This symbol indicates a hot surface. Certain parts of the housing can become hot during operation. After use, wait for a cool-down period of at least 10 minutes before handling or transporting the device.



Warning! This device is designed for use below 2000 metres in altitude.



Warning! This product is not intended for use in tropical climates.



Caution! Intense LED light source! Risk of eye damage. Do not look into the light source.

CAUTION! IMPORTANT INFORMATION ABOUT LIGHTING PRODUCTS!

1. Do not stare, even temporarily, directly into the light beam.
2. Do not look at the beam directly with optical instruments such as magnifiers.
3. Stroboscope effects may cause epileptic seizures in sensitive people! People with epilepsy should definitely avoid places where strobes are used.

SIGNAL TRANSMISSION VIA RADIO (E.G., W-DMX OR WIRELESS AUDIO SYSTEMS):

The quality and performance of wireless signal transmission is generally dependent on the ambient conditions.

The following variables, for example, have an influence on the range and signal stability:

- Shielding (e.g., masonry, metal structures, water)
- High radio frequency (e.g., strong WI-FI networks)
- Interference
- Electromagnetic radiation (e.g., LED video walls)

All range specifications refer to free-field application with visual contact between transmitter and receiver without interference!

INTRODUCTION

MOVING HEAD OPUS SERIES

CLOXW


CONTROL FUNCTIONS

- 29-channel and 48-channel DMX control
- Art-Net
- sACN
- W-DMX™
- RDM-enabled
- Master / slave operation
- Standalone functions

FEATURES

- 750 W LED
- CMY + CTO color mixture
- Color wheel 1 with 6 brilliant colors + open and split colors
- Color wheel 2 with 5 correction filters and UV + open and split colors
- Focusing and zoom function controllable via DMX
- Frost filter and iris
- 4-blade framing shutter
- Stroboscope
- Pan and tilt motors with 16-bit resolution
- Battery-powered display for configuration when not connected to power
- Automatic position correction
- Temperature-controlled fans
- 3-pin and 5-pin DMX connectors
- RJ45 network connectors
- Wireless DMX™
- Neutrik powerCON TRUE1 mains connector, IN and OUT
- 2 Omega mounting brackets included
- Operating voltage: 100–240 V AC
- 1200 W power consumption
- The spotlight complies with the RDM standard (Remote Device Management). Remote device management allows the user to view the status and configuration of RDM terminals via an RDM-enabled controller.

CONNECTIONS, OPERATING AND DISPLAY ELEMENTS

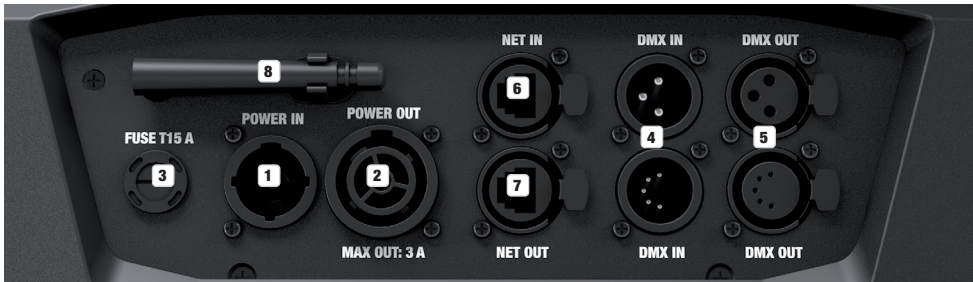

1 POWER IN

Neutrik powerCON TRUE1 mains input socket. Operating voltage 100–240 V AC / 50–60 Hz. A suitable mains cable with powerCON TRUE1 plug is included.

2 POWER OUT

Neutrik powerCON TRUE1 mains output socket. Facilitates power supply to other CAMEO lights. Ensure that the total power consumption of all devices connected to the device does not exceed the given ampere (A) value.

3 FUSE

Fuse holder for 5 x 20 mm micro fuses. **IMPORTANT:** Replace the fuse only with a fuse of the same type and value. In the event of repeated fuse failure, please contact an authorised service centre.

4 DMX IN

Male 3-pin and 5-pin XLR sockets for connection of a DMX control device (e.g. DMX console). Only use the ports alternatively.

5 DMX OUT

Female 3-pin or 5-pin XLR sockets for sending the DMX control signal. Only use the ports alternatively.

6 NET IN

RJ45 network connector for connecting to an Art-Net or sACN network. Use CAT 5e or better cables to set up the network.

7 NET OUT

RJ45 network connector for connecting additional Art-Net or sACN-capable devices to the network. Use CAT 5e or better cables to set up the network.

8 ANTENNE FOR W-DMX™

The antenna for control via W-DMX™ remains in the holder (= operating position) during operation.



9 PRESSURE SENSITIVE LC DISPLAY WITH ILLUMINATION

Thanks to the pressure-sensitive LC display, the device can be operated directly from the display (glove-compatible). The LCD display shows the currently activated mode (main display), the menu items in the selection menu and the numerical value or operating mode in certain menu items. If there is no control signal to the device, the display starts flashing; the flashing stops as soon as a control signal is present (DMX and slave operation, ArtNet and sACN).

10 MENU / SELECT / ENTER

Rotary-push encoder for navigating in the editing menu, adjusting system settings and changing values and status in the corresponding menu items.

Starting from the main display, press the encoder to enter the main menu. Select the individual menu items in the main menu (Control, Settings, Info, etc.) and in the sub-menus by turning the encoder and confirm the selection by pressing the encoder. Change the value or status in a menu item by turning the encoder and confirm the change by pressing the encoder.

11 BACK

Press BACK to go up one level in the menu structure. To go directly from the sub-menus to the main display, press and hold the BACK button for about 2 seconds.

12 USB INTERFACE

USB interface for updating the device firmware. In the Service menu, set the status for USB Update to Yes. When available, download the latest firmware from the product page at www.cameolight.com, unzip it and copy the files to a folder without special characters on a USB stick. Disconnect the Moving Head from the mains and all input connections (DMX / Ethernet), connect the USB stick to the USB interface and reconnect the Moving Head to the mains. The USB stick is automatically recognised and shown in the display. Now navigate to the corresponding folder on the USB stick and confirm with ON. The update procedure begins. If updates are required for several components, the procedure must be carried out individually for all updates. Do not remove the USB stick or disconnect the Moving Head from the mains during the update procedure.

BATTERY-POWERED DISPLAY

The battery-powered display can be activated, even if the device is not connected to the mains. To do this, briefly press the rotary push encoder. You can now access device information to change and save system settings without mains connection. External control of the spotlight is not activated in this case. For this reason, the display shows that there is no DMX signal even if a DMX signal is present at the device.



13 PAN LOCK

Mechanical locking device used to prevent the rotation of the head in the horizontal direction during transport. Disconnect the unit from the mains and slide the locking lever in the direction of the pan rotation axis, moving the head of the unit horizontally until one of the 8 locking positions is found and the locking lever engages **LOCK**. Unlock the device before startup **UNLOCK**.

14 TILT LOCK

Mechanical locking device used to prevent the rotation of the head in the vertical direction during transport. Disconnect the unit from the mains and slide the locking lever in the direction of the tilt rotation axis, moving the head of the unit vertically until one of the 7 possible locking positions is found and the locking lever engages **LOCK**. Unlock the device before startup **UNLOCK**.



15 RECESSED GRIPS

In addition to the two transport handles on the base of the unit, there are practical recessed grips at the top of the inner sides of the two device arms.


OPERATION

NOTES

When the lamp is correctly connected to the mains supply, the Cameo logo is shown on the display during start-up and motor reset along with details of the device model. After this process, the spotlight is ready for operation and the previously activated operating mode is launched.


The main display is activated automatically after approximately two minutes without input. Press BACK to go up one level in the sub-menus.

In the event of a technical fault, the warning triangle symbol appears in the top right-hand corner (tap for further information).

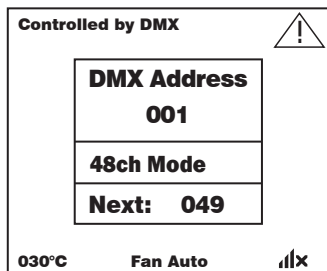


The spotlight is operated firstly by means of the rotary push-pull encoder and the BACK button next to the display, and secondly the pressure-sensitive (glove-compatible) display itself can be used to access all menu items and configure settings intuitively as desired. The control panels in the main display and in the main menu or sub-menus and their functions are shown in the illustrations below. The fields marked grey in the illustration of the main display are control panels with direct access.

MAIN DISPLAY

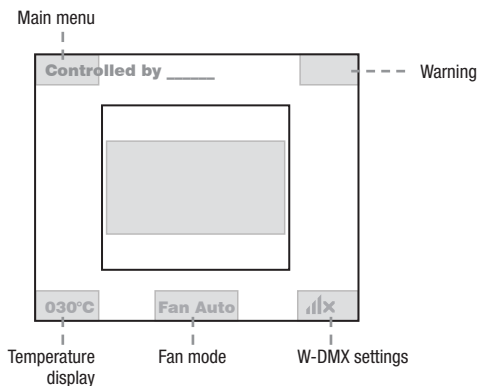


MAIN MENU AND SUB-MENUS

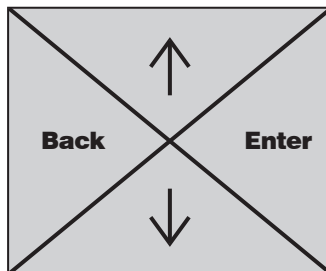

MAIN DISPLAY DMX AND W-DMX OPERATING MODE

The top line of the display shows whether a control signal is available at the device, the middle field shows the DMX start address, the DMX mode and the address following the start address set in the device, corresponding to the number of channels of the DMX mode. The bottom line displays the temperature of the LED unit, the fan mode and W-DMX status.

As soon as the control signal is interrupted, the characters in the display start flashing and "None" is shown after "Controlled by" in the top line (no signal); when the control signal is available again, the flashing stops.

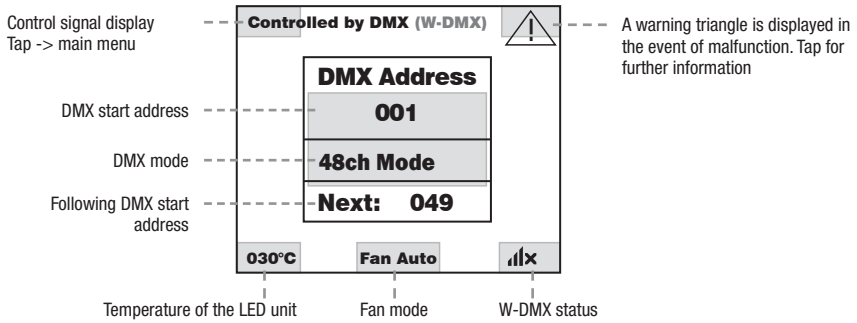


The fields marked grey in the figure are control panels with direct access to the corresponding menu item.

MAIN DISPLAY ART-NET AND SACN OPERATING MODE

The top line of the display shows whether a control signal is available at the device, the middle field shows the operating mode, the DMX start address, the DMX mode and the address following the start address set in the device, corresponding to the number of channels of the DMX mode. Below this, the DMX universe, IP address and subnet mask are displayed.


The bottom line displays the temperature of the LED unit, the lamp mode and W-DMX status. As soon as the control signal is interrupted, the characters in the display start flashing and "None" is shown after "Controlled by" in the top line (no signal); when the control signal is available again, the flashing stops.

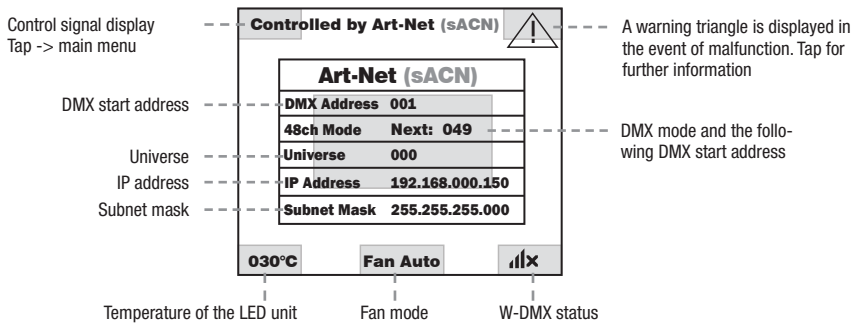

The fields marked grey in the figure are control panels with direct access to the corresponding menu item.

MAIN DISPLAY SLAVE AND STATIC MODE

The top line of the display shows whether a control signal is available on the device and the middle field shows the SLAVE or STATIC mode with the selected scene (Run Scene x). The bottom line displays the temperature of the LED unit, the fan mode and W-DMX status. If the control signal is interrupted in slave mode, the characters in the display start flashing and "None" is shown after "Controlled by" in the top line (no signal); when the control signal is available again, the flashing stops.

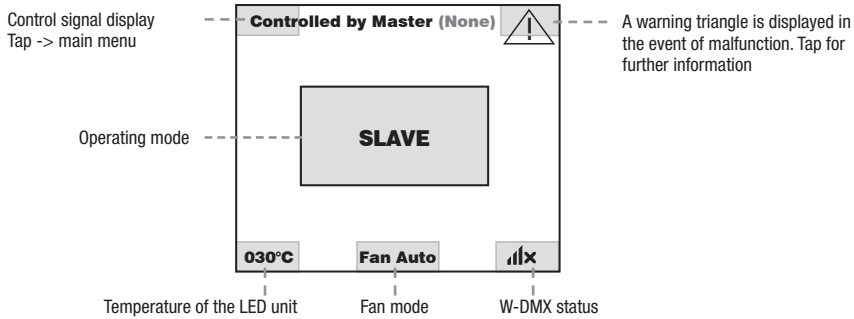

W-DMX™

To pair a W-DMX receiver with a W-DMX compatible transmitter, the Reset command must be executed in the menu item WDMX under Receiver (select Reset and confirm). The receiver is now in pairing standby and waiting for a pairing request from a transmitter. Start the pairing by selecting Link in the menu of the transmitter and confirming; the pairing now takes place automatically. In the same way, several receivers can be paired simultaneously or one after the other to a transmitter (e.g. for master / slave operation). A W-DMX connection is always maintained until the connection is disconnected by means of the Reset command in the receiver or the Unlink command in the transmitter, regardless of whether a device has been disconnected from the power supply in the meantime.

W-DMX™ STATUS

W-DMX deactivated	W-DMX as receiver activated, not paired	W-DMX as receiver activated and paired, Transmitter switched off or out of range	W-DMX as receiver activated and paired, no DMX signal	W-DMX as receiver activated and paired, DMX signal is present	W-DMX as transmitter with G3 standard activated, DMX signal is present	W-DMX as transmitter with G4s standard activated, DMX signal is present	W-DMX as transmitter with G3 standard activated, no DMX signal	W-DMX as transmitter with G4s standard activated, no DMX signal

The following is a description of how to operate the spotlight using the rotary-push encoder and the BACK button next to the display.

CONTROL MENU (Control)

The control menu enables selection of the various operating modes and their settings in the relevant sub-menus.

DMX OPERATION VIA XLR INPUT

Starting from the main display, press the rotary-push encoder to enter the main menu. Select the **Control** menu by turning and pressing the encoder. By turning the encoder you can now select the menu item **Protocol**, confirm by pressing the encoder and then select **DMX** by turning the encoder and confirm by pressing the encoder.

<p>----- Menu -----</p> <p>► Control</p> <p>Settings</p> <p>Info</p> <p>Service</p> <p>Quicklight</p> <p>Help</p>	<p>----- Control -----</p> <p>► Protocol DMX</p> <p>DMX Address</p> <p>DMX Mode</p> <p>W-Transmitter</p> <p>W-DMX Standard</p> <p>► DMX</p> <p>WDMX</p> <p>ArtNet</p> <p>sACN</p> <p>Slave</p> <p>Static</p>	<p>----- Control -----</p> <p>Protocol DMX</p> <p>► DMX Address 001</p> <p>DMX Mode 48ch</p> <p>W-Transmitter On</p> <p>W-DMX Standard G4s</p>
---	---	---

Information on the sub-menu items in the DMX menu and the relevant setting options can be found in the table below.

Protocol DMX		
Select by turning the encoder, confirm by pressing, change value or status by turning, confirm by pressing. Back with BACK.		
DMX Address	Setting the DMX start address	001–512
DMX Mode	Selecting the DMX mode	29 ch / 48 ch
W transmitter	Activate (On) or deactivate (Off) forwarding of the DMX signal via W-DMX.	On
		Off
	Establish (Linking) or release (Unlink) a connection to other W-DMX devices.	Linking
		Unlink
W-DMX standard	Setting the W-DMX standard (G3 / G4s)	G3
		G4s

DMX OPERATION VIA W-DMX

Starting from the main display, press the rotary-push encoder to enter the main menu. Select the **Control** menu by turning and pressing the encoder. By turning the encoder you can now select the menu item **Protocol**, confirm by pressing the encoder and then select **WDMX** by turning the encoder and confirm by pressing the encoder.

<p>----- Menu -----</p> <p>► Control</p> <p>Settings</p> <p>Info</p> <p>Service</p> <p>Quicklight</p> <p>Help</p>	<p>----- Control -----</p> <p>► Protocol WDMX</p> <p>DMX Address</p> <p>DMX Mode</p> <p>Receive</p> <p>W-DMX Standard</p> <p>DMX XLR Out</p> <p>DMX</p> <p>► WDMX</p> <p>ArtNet</p> <p>sACN</p> <p>Slave</p> <p>Static</p>	<p>----- Control -----</p> <p>Protocol WDMX</p> <p>► DMX Address 001</p> <p>DMX Mode 48ch</p> <p>Receiver On</p>
---	--	--

See the table below for information on the sub-menu items in the W-DMX menu and the relevant setting options.

Protocol WDMX		
Select by turning the encoder, confirm by pressing, change value or status by turning, confirm by pressing. Back with BACK.		
DMX Address	Setting the DMX start address	001–512
DMX Mode	Selecting the DMX mode	29 ch / 48 ch
Receiver	Activate (On) and deactivate (Off) W-DMX	On
		Off
	Reset = Terminate the connection to all paired W-DMX transmitters and put them on pairing standby	Reset

OPERATION VIA ART-NET PROTOCOL

Starting from the main display, press the rotary-push encoder to enter the main menu. Select the **Control** menu by turning and pressing the encoder. By turning the encoder you can now select the menu item **Protocol**, confirm by pressing the encoder and then select **ArtNet** by turning the encoder and confirm by pressing the encoder.

----- Menu -----	
▶ Control	
Settings	
Info	
Service	
Quicklight	
Help	

----- Control -----	
▶ Protocol	ArtNet
DMX Address	DMX
DMX Mode	WDMX
Universe Group	▶ ArtNet
Universe	sACN
IP Address	Slave
Subnet Mask	Static
W-Transmitter	
W-DMX Standard	
DMX XLR Out	

----- Control -----	
Protocol	ArtNet
▶ DMX Address	001
DMX Mode	48ch
Universe Group	000
Universe	000
IP Address	
Subnet Mask	
W-Transmitter	On
W-DMX Standard	G4s
DMX XLR Out	On

See the table below for information on the sub-menu items in the W-DMX menu and the relevant setting options.

Protocol Art-Net		
Select by turning the encoder, confirm by pressing, change value or status by turning, confirm by pressing. Back with BACK.		
DMX Address	Setting the DMX start address	001–512
DMX Mode	Selecting the DMX mode	29 ch / 48 ch
Universe Group	Setting the Universe Group	000–127
Universe	Setting the universe	000–255
IP Address	Setting the IP address: Set 1st block, confirm, set 2nd block, confirm ...	xxx.xxx.xxx.xxx
Subnet Mask	Adjustment of the subnet mask: Set 1st block, confirm, set 2nd block, confirm ...	xxx.xxx.xxx.xxx
W transmitter	Activate (On) or deactivate (Off) forwarding of the DMX signal via W-DMX.	On Off
	Establish (Linking) or release (Unlink) a connection to other W-DMX devices.	Linking Unlink
W-DMX standard	Setting the W-DMX standard (G3 / G4s)	G3 G4s
DMX XLR Out	Forward the control signal via XLR Out Activate (On) and Deactivate (Off)	On Off

OPERATION VIA sACN PROTOCOL

Starting from the main display, press the rotary-push encoder to enter the main menu. Select the **Control** menu by turning and pressing the encoder. By turning the encoder you can now select the menu item **Protocol**, confirm by pressing the encoder and then select **sACN** by turning the encoder and confirm by pressing the encoder.

----- Menu -----	
▶ Control	
Settings	
Info	
Service	
Quicklight	
Help	

----- Control -----	
▶ Protocol	sACN
DMX Address	DMX
DMX Mode	WDMX
Universe Group	ArtNet
Universe	▶ sACN
IP Address	Slave
Subnet Mask	Static
W-Transmitter	
W-DMX Standard	
DMX XLR Out	




----- Control -----	
Protocol	sACN
▶ DMX Address	001
DMX Mode	48ch
Universe Group	000
Universe	001
IP Address	
Subnet Mask	
W-Transmitter	On
W-DMX Standard	G4s
DMX XLR Out	On

Information on the sub-menu items in the sACN menu and the relevant setting options can be found in the table below.

Protocol sACN		
Select by turning the encoder, confirm by pressing, change value or status by turning, confirm by pressing. Back with BACK.		
DMX Address	Setting the DMX start address	001-512
DMX Mode	Selecting the DMX mode	29 ch / 48 ch
Universe Group	Setting the Universe Group	000-255
Universe	Setting the universe	001-256
IP Address	Setting the IP address: Set 1st block, confirm, set 2nd block, confirm ...	xxx.xxx.xxx.xxx
Subnet Mask	Adjustment of the subnet mask: Set 1st block, confirm, set 2nd block, confirm ...	xxx.xxx.xxx.xxx
W transmitter	Activate (On) or deactivate (Off) forwarding of the DMX signal via W-DMX.	On
		Off
	Establish (Linking) or release (Unlink) a connection to other W-DMX devices.	Linking
		Unlink
W-DMX standard	Setting the W-DMX standard (G3 / G4s)	G3
		G4s
DMX XLR Out	Forward the control signal via XLR Out Activate (On) and Deactivate (Off)	On
		Off




SLAVE MODE

Starting from the main display, press the rotary-push encoder to enter the main menu. Select the **Control** menu by turning and pressing the encoder. By turning the encoder, select the menu item **Protocol**, confirm by pressing the encoder and then select **Slave** by turning the encoder and confirm by pressing the encoder. Connect the slave and the master unit (same model, same software version) with a DMX cable (Master DMX OUT – Slave DMX IN) and enable the standalone mode Static on the master unit. The slave unit will now follow the master unit.

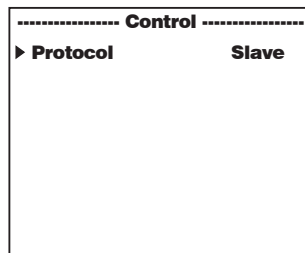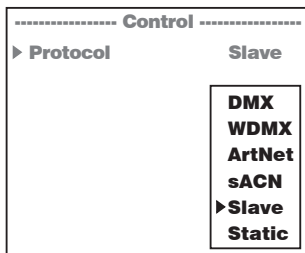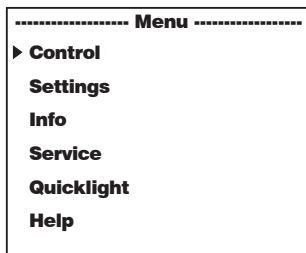

STANDALONE OPERATION STATIC

Starting from the main display, press the rotary-push encoder to enter the main menu. Select the **Control** menu by turning and pressing the encoder. By turning the encoder you can now select the menu item **Protocol**, confirm by pressing the encoder and then select **Static** by turning the encoder and confirm by pressing the encoder.

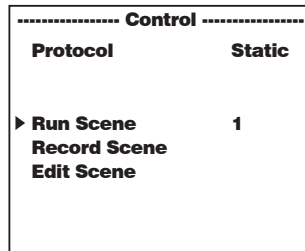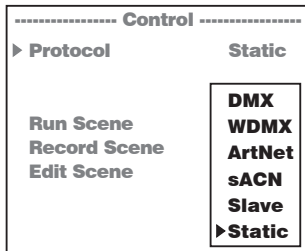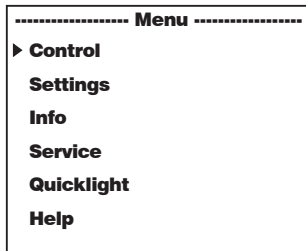

Information on the sub-menu items in the Static menu and the relevant setting options can be found in the tables below.

Protocol Static		
Select by turning, confirm by pressing, change value by turning, confirm by pressing. Back with BACK.		
Run Scene	Scene selection	1–8
Record Scene	Record scene (activate DMX, W-DMX, Art-Net, or sACN mode, change desired setting in the relevant controller, select and confirm desired scene)	1–8
Edit Scene	Editing a scene	1–8

Edit Scene		
Rotate to select, press to confirm, rotate to change value or status, press to confirm. Go back with BACK.		
Pan	Panning setting	000–255
Tilt	Tilt setting	000–255
Dimmer	Brightness	000–255
Strobe	Stroboscope	000–255
Segment dim	LED segment selection	000–255
Sparkle FX	LED segment effect	000–255
Cyan	CMY color mixing	000–255
Magenta		000–255
Yellow		000–255
CTO	CTO	000–255
Color wheel	Color wheel	000–255
Color wheel 2	Color wheel 2	000–255
Zoom	Zoom	000–255
Focus	Focus	000–255
Iris	Iris	000–255
Frost	Frost filter	000–255
Blade 1A	Blade 1A	000–255
Blade 1B	Blade 1B	000–255
Blade 2A	Blade 2A	000–255
Blade 2B	Blade 2B	000–255
Blade 3A	Blade 3A	000–255
Blade 3B	Blade 3B	000–255
Blade 4A	Blade 4A	000–255
Blade 4B	Blade 4B	000–255
Blade rot.	Rotation of framing shutter	000–255
Pan Tilt Macro	Pan/tilt preset	000–255
Pan Tilt Speed	Pan/tilt speed	000–255

SYSTEM SETTINGS (Settings)

Starting from the main display, press the rotary-push encoder to enter the main menu. Turn the encoder to select the system **Settings** menu and press the encoder.

----- Menu -----	
Control	
▶ Settings	
Info	
Service	
Quicklight	
Help	

----- Settings -----	
▶ Setup	Display
Reverse Backlight	▶ Display Dimmer Motor Opera. Misc

----- Settings -----	
Setup	Display
▶ Reverse Backlight	Auto Off

This will take you to the sub-menu for editing the sub-menu items, see table:

Settings			
Select by turning, confirm by pressing, change value or status by turning, confirm by pressing. Back with BACK.			
Display	Reverse	Off	No display rotation
		On	Rotate display by 180°
		Auto	Automatic display rotation
	Backlight	Off	Deactivation of display illumination after approx. 1 minute without input
On		Display lighting permanently on	
Dimmer	Curve	Linear	Light intensity increases linearly with DMX value
		Exp	Light intensity can be finely adjusted at lower DMX values and broadly adjusted at higher DMX values
		Log	Light intensity can be broadly adjusted at lower DMX values and finely adjusted at higher DMX values
		S-curve	Light intensity can be finely adjusted at lower and higher DMX values and broadly adjusted at medium DMX values
	Response	LED	Lamp responds abruptly to changes in DMX value
		Halogen	Spotlight behaves in a similar way to a halogen spotlight with soft brightness changes
	PWM Frequency	650 Hz	Select LED PWM frequency
		1530 Hz	
3600 Hz			
12 kHz			
18.9 kHz			
25 kHz			

Motor	Pan Reverse	Off	Pan movement direction does not reverse
		On	Pan movement direction reverses
	Tilt Reverse	Off	Tilt movement direction does not reverse
		On	Tilt movement direction reverses
	Pan Angle	630	630° pan angle
		540	540 ° pan angle
	Feedback	Off	Automatic position correction deactivated
		On	Automatic position correction activated
	Color Position	Status (standard)	Default color wheel rotation at color change
		Short	Color wheel turns shortest path when color changes
	Color Wheel	Scroll	Color wheel can be turned continuously
		Snap	When the corresponding value is reached, the color wheel jumps directly to the desired color filter.
	Blackout P/T	Off	No blackout when head moves
		On	Blackout when head moves
Blackout Color	Off	No blackout when value changes in the color wheel channel	
	On	Blackout when value changes in the color wheel channel	
Opera.	Fan	Auto	The fan speed is adjusted depending on the temperature
		Silent	Reduced maximum fan speed, resulting in reduced noise. Reduced brightness, if necessary
		Off	Deactivate the fans, resulting in greatly reduced brightness
	Motor Speed	Normal	Normal operation of pan and tilt motor
		Silent	Reduced maximum speed of pan and tilt motor, resulting in reduced noise
Misc	Auto Lock	Off	Deactivates automatic locking of the control elements
		On	Automatically locks the control elements after approx. 1 minute of inactivity Lock: Press encoder for approx. 5 sec.
	Signal Fail	Hold	Last command is held during control signal interruption
		Scene 1	When control signal is interrupted, Scene 1 is activated
		Fa.Out	When control signal is interrupted, spotlight dims slowly
		Bla.out	Immediate blackout in case of control signal interruption
	Temp Unit	°C	Displays the temperature in Celsius
		°F	Displays the temperature in Fahrenheit
	Set Def. Values	User A	Save user settings A
		User B	Save user settings B
User C		Save user settings C	

Motor	Pan Reverse	Off	Does not reverse pan direction
		On	Reverses pan direction
	Tilt Reverse	Off	Does not reverse tilt direction
		On	Reverses tilt direction
	Pan Angle	630	630° pan angle
		540	540° pan angle
	Feedback	Off	Automatic position correction is disabled
		On	Automatic position correction is enabled
	Colour position	Stand (standard)	Standard rotation of colour wheel on colour change
		Short	Colour wheel turns the shortest distance on colour change
	Gobo position	Stand (standard)	Standard rotation of gobo wheel on gobo change
		Short	Gobo wheel turns the shortest distance on gobo change
	Colour wheel	Scroll	Colour wheel offers continuously variable rotation
		Snap	Colour wheel jumps directly back to the desired colour filter when the relevant value is reached
	Gobo wheel	Scroll	Gobo wheel offers continuously variable rotation
		Snap	Gobo wheel jumps directly back to the desired gobo when the relevant value is reached
	Blackout P/T	Off	No blackout during head movement
		On	Blackout during head movement
	Blackout Prism	Off	No blackout when value is changed in prism channel
		On	Blackout when value is changed in prism channel
Blackout Gobo	Off	No blackout when value is changed in gobo channel	
	On	Blackout when value is changed in gobo channel	
Blackout Colour	Off	No blackout when value is changed in colour wheel channel	
	On	Blackout when value is changed in colour wheel channel	
Opera.	Fan	Auto	The fan speed is automatically adjusted according to temperature
		Silent	Reduced maximum fan speed, resulting in quieter operation Reduced brightness if required
		Off	Deactivates fan, resulting in greatly reduced brightness
	Motor Speed	Normal	Normal operation of pan and tilt motor
		Silent	Reduced maximum speed of pan and tilt motor, resulting in quieter operation
Misc.	Auto Lock	Off	Automatic locking of the controls is disabled
		On	Automatic locking of the controls after approximately 1 minute without input. Unlock: Press encoder for approx. 5 seconds
	Signal Fail	Hold	Last command is maintained if the control signal is interrupted
		Scene 1	Scene 1 is activated if the control signal is interrupted
		Fa.Out	The spotlight is slowly dimmed if the control signal is interrupted
		Bla.out	Instant blackout if the control signal is interrupted
	Temp Unit	°C	Displays temperature in Celsius
		°F	Display in Fahrenheit
	Set Def. Values	User A	Save user settings A
		User B	Save user settings B
User C		Save user settings C	

DEVICE INFORMATION (Info)

Starting from the main display, press the rotary-push encoder to enter the main menu. Turn the encoder to select the **Info** menu for device information and press the encoder. In order to have the required information displayed, select the relevant menu item by turning the encoder and then press the encoder to confirm.

----- Menu -----	
Control	
Settings	
▶ Info	
Service	
Quicklight	
Help	

----- Info -----	
▶ Firmware	V1.x.x
Temperature	035°C
Fan Speed	Auto
Runtime	0020 h
MAC	
RDM-UID	
Show DMX Values	
Error Info	
DMX Table	

Info			
Select by turning the encoder, confirm by pressing and return with BACK.			
Firmware	Disp:	V1.x.x	
	NET:	V1.x.x	
	Dimmer	V1.x.x	
	CTR1-Motor:	V1.x.x	
	CTR2-Motor	V1.x.x	
	CTR3-Motor	V1.x.x	
	CTR4-Motor	V1.x.x	
	CTR5-Motor:	V1.x.x	
	CTR6-Motor:	V1.x.x	
Temperature	LED	xxx °C / °F	
	Base	xxx °C / °F	
Fan Speed	BaseFan1	xxxx RPM	
	BaseFan2	xxxx RPM	
	CoolFan1	xxxx RPM	
	CoolFan2	xxxx RPM	
	CoolFan3	xxxx RPM	
	CoolFan4	xxxx RPM	
	CMY Fan1	xxxx RPM	
	CMY Fan2	xxxx RPM	
	HeadFan1	xxxx RPM	
	HeadFan2	xxxx RPM	
Runtime	Total	xxxx h : xx m	Total operating time
	Service	xxxx h : xx m	Operating time after service appointment
MAC	MAC address		
RDM-UID	RDM Unique Identifier		
Show DMX values	Displays the applied DMX values		
Error info	Error display in case of malfunction		
DMX Table	29 ch	Shows the DMX tables	
	48 ch		

SERVICE MENU (Service)

Starting from the main display, press the rotary-push encoder to enter the main menu. Select **Service** by turning the encoder and press the encoder to confirm.

----- Menu -----	----- Service -----
Control	▶ Default Values
Settings	Reset
Info	Test
▶ Service	LED Calibration
Quicklight	Reset Service Runtime
Help	USB Update
	Password

This takes you to the Service menu, see table:

Service		
Select by turning, confirm by pressing, select command by turning, confirm by pressing. Back with BACK.		
Default values	Factory	Resets to factory setting
	User A	Resets to User A values (save user values: Settings -> Set def. values)
	User B	Resets to User B values (save user values: Settings -> Set def. values)
	User C	Resets to User C values (save user values: Settings -> Set def. values)
Reset	All	Resets all motors
	Pan / Tilt	Resets pan / tilt motors
	Head	Resets motors in the device head
Test	Sequence	Pre-programmed sequence to test all components
	Stress Test	Pre-programmed sequence to test all components under maximum load
	Segment	Tests LED segments
	Run Motor	Activate all motors individually with values of 000 to 255
LED Calibration	000-100	Sets maximum brightness
Reset Service Runtime	No	Do not reset service operation time
	Yes	Reset service operation time
USB Update	No	Do not run firmware update via USB interface
	Yes	Run firmware update via USB interface
Password	For service purposes only	

QUICKLIGHT



Set up a scene quickly and easily using the basic Moving Head functions without an external controller. Starting from the main display, press the rotary-push encoder to enter the main menu. Select **Quicklight** by turning the encoder and press the encoder to confirm. Now select the desired menu item again by turning the encoder, pressing the encoder and setting the value from 000 to 255 as desired (change value by turning, confirm by pressing, back with BACK).

----- Menu -----	----- Quicklight -----
Control	▶ Pan 000 - 255
Settings	Tilt 000 - 255
Info	Dimmer 000 - 255
Service	Zoom 000 - 255
▶ Quicklight	Focus 000 - 255
Help	

If the Quicklight mode is activated, the display does not automatically change to the main display; when leaving the Quicklight menu, Quicklight mode is automatically terminated. The settings in the Quicklight menu are retained until the next restart of the spotlight; as a result, Quicklight can be accessed repeatedly with the same settings as long as the spotlight remains switched on. After restart, the values in the Quicklight settings are reset (PAN = 127, TILT = 127, DIMMER = 000, ZOOM = 127, FOCUS = 127).

HELP (Help menu)

In the Help menu you will find three pages with 1. Information on quick commands that take you directly to specific menu items, 2. Information on the division of the display into control panels in the main menu and sub-menus, and 3. Information about the device itself. Starting from the main display, press the rotary-push encoder to enter the main menu. Select **Help** by turning the encoder and press the encoder to confirm. Select the desired information again by turning the encoder.

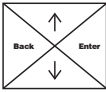
<p>----- Menu -----</p> <p>Control</p> <p>Settings</p> <p>Info</p> <p>Service</p> <p>Quicklight</p> <p>► Help</p>	<p>----- Help -----</p> <p>Shortcuts</p> <p>Turn encoder in the home screen to change the DMX address</p> <p>Push & turn right to jump to the latest selected menu point</p> <p>Push BACK for 3 seconds to jump to the home screen without saving</p>	<p>----- Help -----</p> <p>Touchscreen</p> <p>In home screen: Press left upper corner to jump into main menu or symbols for appropriate point in menu: Each area works as button for navigating</p> 	<p>Cameo</p> <p>Opus XW</p>  <p>Cameo® is a brand of the Adam Hall Group www.adamhall.com</p>
---	--	--	---

SET-UP AND INSTALLATION

Thanks to its integrated rubber feet, the spotlight can be positioned in a suitable location on a firm and level surface. Traverse installation can be achieved with the help of two Omega brackets, which are attached to the base of the device **A**. 2 x Omega brackets are included. Suitable beam clamps are available as an option. Ensure firm connections and secure the spotlight to the securing lug with a suitable safety cable **B**.



Important: Overhead mounting requires extensive experience, including the calculation of the limit values for load, the installation materials and regular safety inspection of all installation materials and spotlights. If you do not have these qualifications, do not attempt to perform an installation yourself. Refer instead to a qualified professional.

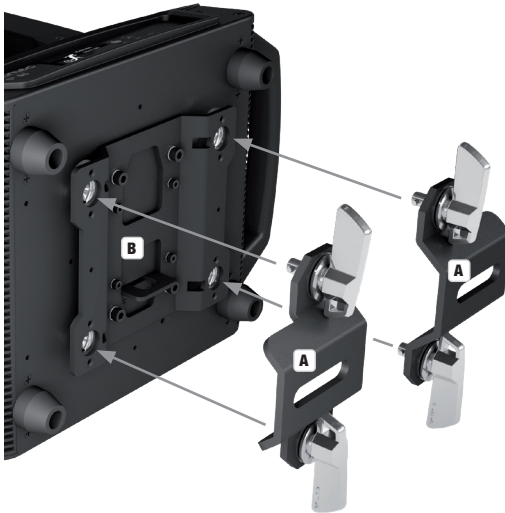

DMX TECHNOLOGY

DMX-512

DMX (Digital Multiplex) is the designation for a universal transmission protocol for communications between corresponding devices and controllers. A DMX controller sends DMX data to the connected DMX device(s). The DMX data is always transmitted as a serial data stream that is forwarded from one connected device to the next via the "DMX IN" and "DMX OUT" connectors (XLR plug-type connectors) that are found on every DMX-capable device, provided the maximum number of devices does not exceed 32 units. The last device in the chain needs to be equipped with a terminator (terminating resistor).



DMX CONNECTION

DMX is the common "language" via which a very wide range of types and models of equipment from various manufacturers can be connected with one another and controlled via a central controller, provided that all of the devices and the controller are DMX compatible. For optimum data transmission, it is necessary to keep the connecting cables between the individual devices as short as possible. The order in which the devices are integrated in the DMX network has no influence on the addresses. Thus the device with the DMX address 1 can be located at any position in the (serial) DMX chain: at the beginning, at the end or somewhere in the middle. If the DMX address 1 is assigned to a device, the controller "knows" that it should send all data allocated to address 1 to this device regardless of its position in the DMX network.

SERIAL CONNECTION OF MULTIPLE LIGHTS

1. Connect the male XLR connector (3-pin or 5-pin) of the DMX cable to the DMX output (female XLR socket) of the first DMX device (e.g. DMX-Controller).
2. Connect the female 3-pin XLR connector of the DMX cable connected to the first projector to the DMX input (male 3-pin socket) of the next DMX device. In the same way, connect the DMX output of this device to the DMX input of the next device and repeat until all devices have been connected. Please note that as a rule, DMX devices are connected in series and connections cannot be shared without active splitters. The maximum number of DMX devices in a DMX chain should not exceed 32 units.


The Adam Hall 3 STAR, 4 STAR, and 5 STAR product ranges include an extensive selection of suitable cables.

DMX CABLES


When fabricating your own cables, always observe the illustrations on this page. Never connect the shielding of the cable to the ground contact of the plug, and always make certain that the shielding does not come into contact with the housing of the XLR plug. If the shielding is connected to the ground, this can lead to short-circuiting and system malfunctions.

PIN ASSIGNMENT

DMX cable with 3-pin XLR connectors:

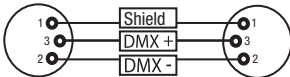

DMX cable with 5-pin XLR connectors (pin 4 and 5 are not used):

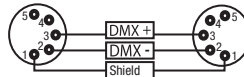

DMX TERMINATORS (TERMINATING RESISTORS)


To prevent system errors, the last device in a DMX chain needs to be equipped with a terminating resistor (120 ohm, 1/4 Watt).

3-pin XLR connector with a terminating resistor: K3DMXT3


5-pin XLR connector with a terminating resistor: K3DMXT5

PIN ASSIGNMENT

3-pin XLR connector:

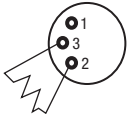

5-pin XLR connector:

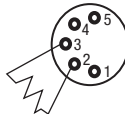


DMX ADAPTER

The combination of DMX devices with 3-pin connectors and DMX devices with 5-pin connectors in a DMX chain is possible with suitable adapters.

PIN ASSIGNMENT

DMX Adapter 5-pin XLR male to 3-pin XLR female: K3DGF0020


Pins 4 and 5 are not used.

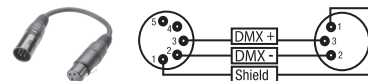

PIN ASSIGNMENT

DMX Adapter 3-pin XLR male to 5-pin XLR female: K3DHM0020

Pins 4 and 5 are not used.

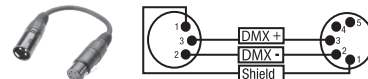

TECHNICAL DATA

ENGLISH

Article number:	CLOXW
Product type:	LED moving light
Type:	Profile washer
Number of lamps:	1
Type of lamps:	750 W LED
Color temperature:	Cold white 6100 K
LED PWM frequency:	650 Hz, 1530 Hz, 3600 Hz, 12 kHz, 18.9 kHz, 25 kHz (configurable)
Color mix function:	CMY + CTO
Color wheel, number of colors:	2 x 6 + open and continuous positioning
Number of gobos:	None
Beam angle:	5°–46°
Effects:	Iris, heavy frost, rotatable shutter blades, LED segment FX
Interfaces:	3-pin XLR (in/out) 5-pin XLR (in/out) RJ-45 Ethercon (in/out) Wireless DMX (transceiver)
DMX mode:	29 CH / 48 CH
DMX functions:	Pan/tilt, pan/tilt fine, dimmer, dimmer fine, LED segment dimmer, Sparkle FX, multifunctional strobe, cyan, cyan fine, magenta, magenta fine, yellow, yellow fine, CTO, CTO fine, color wheel 1, color wheel 2, zoom, zoom fine, focus, focus fine, iris, frost, shutter blades, shutter blade rotation, pan/tilt macros, pan/tilt speed, system settings
Stand-alone functions:	Static mode, Master/Slave mode
System settings:	Display reverse, display illumination on/off, signal fail, pan reverse, tilt reverse, pan angle, feedback, movement blackout, test, reset, user default values, blackout functions, color/gobo wheel scroll/snap, auto lock, PWM frequency, fan, motor speed, dimmer curves, dimmer response
Controller:	DMX512, RDM enabled, W-DMX™ (transceiver), Art-Net, sACN
Control elements:	Encoder wheel + back button / touchscreen
Display elements:	Backlit color LC display, battery-powered to configure system settings without being connected to power
Operating voltage:	100–240 V AC / 50–60 Hz
Power consumption:	1200 W
Luminous flux:	32,000 lm
Power supply connection:	Neutrik powerCON TRUE1 in and out (max. output 3 A)
Fuse:	T15AL / 250 V (5 x 20 mm)
Ambient temperature in use:	0°C–40°C
Relative humidity:	< 85%, non-condensing
Housing material:	Metal, ABS
Housing color:	Black
Housing cooling:	Temperature-controlled fans
Dimensions (W × H × D, without mounting bracket):	436 x 800 x 312 mm
Weight:	41 kg
Additional features:	1 m power cable with Neutrik powerCON TRUE1 plug and 2 Omega mounting brackets included in delivery

DEUTSCH

FRANCAIS

ESPAÑOL

POLSKI

ITALIANO

DMX

MANUFACTURER'S DECLARATIONS

MANUFACTURER'S WARRANTY & LIMITATIONS OF LIABILITY

You can find our current warranty conditions and limitations of liability at: https://cdn-shop.adamhall.com/media/pdf/MANUFACTURERS-DECLARATIONS_CAMEO.pdf. To request warranty service for a product, please contact Adam Hall GmbH, Adam-Hall-Str. 1, 61267 Neu Anspach / Email: Info@adamhall.com / +49 (0)6081 / 9419-0.



CORRECT DISPOSAL OF THIS PRODUCT

(valid in the European Union and other European countries with a differentiated waste collection system)

■ This symbol on the product, or on its documents indicates that the device may not be treated as household waste. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. Please dispose of this product separately from other waste and have it recycled to promote sustainable economic activity. Household users should contact either the retailer where they purchased this product, or their local government office, for details on where and how they can recycle this item in an environmentally friendly manner. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

CE COMPLIANCE

Adam Hall GmbH states that this product meets the following guidelines (where applicable):

R&TTE (1999/5/EC) or RED (2014/53/EU) from June 2017

Low voltage directive (2014/35/EU)

EMV directive (2014/30/EU)

RoHS (2011/65/EU)

The complete declaration of conformity can be found at www.adamhall.com.

Furthermore, you may also direct your enquiry to info@adamhall.com.

