


## **DSP-15(T)**

Commercial Audio Solutions Ltd The Old Barn, Whitecroft Farm Strines, Derbyshire. SK22 3AH. Tel: 01663 767888

www.commercialaudiosolutions.com

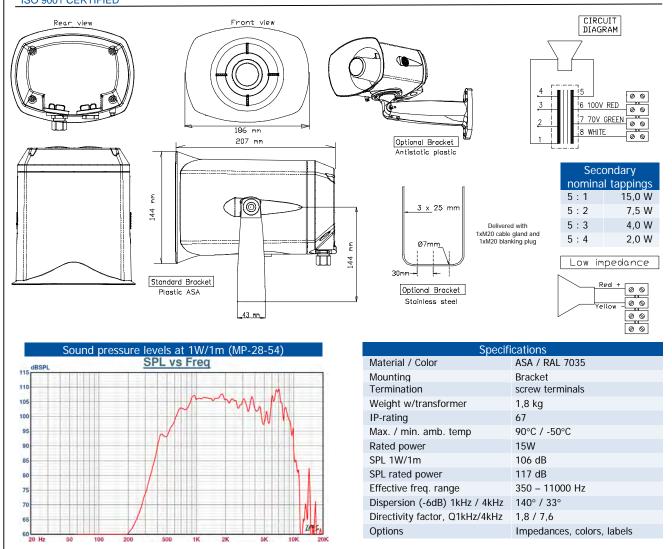

## Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through the cable gland and connect to the terminal. (White: Green 70V or White: Red 100V)
- Select required tapping on the transformer.
- Check that the gasket is fitted correctly on to the lid. Do not use any lubricants on the gasket.
- Screw lid back into place by four screws with a torque of 1.3 1.8 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- DSP-15(T) can be supplied with three different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.