MICROMIC

THE ORIGINAL








Table of Contents

	Page
1 Precaution/Description 1.1 Precaution. 1.2 Packing List 1.3 Optional Accessories 1.4 Brief Description. 1.5 C 520 1.6 C 520 L	13 13 13 14
2 Interfacing	15
3 Using Your Microphone	16 17 18
4 Cleaning. 4.1 Microphone Surface. 4.2 Windscreen.	19
5 Troubleshooting	20
6 Specifications	21

1 Precaution/Description

Please make sure that the piece of equipment your microphone will be connected to fulfills the safety regulations in force in your country and is fitted with a ground lead.




1.1 Precaution

1.2 Packing List



Check that the packaging contains all of the components listed above. Should anything be missing, please contact your AKG dealer.

- Visit www.akg.com or refer to the latest MicroMic brochure.
- C 520 L: B 29 L battery power supply

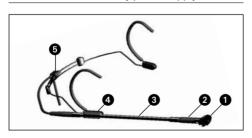

1.3 Optional Accessories

1.4 Brief Description

Fig. 1: C 520/ C 520 L microphone.

- Cardioid microphone for high gain before feedback. Frequency response tailored to vocal use and flute miking.
- 2 Shock mount reduces handling and cable noise.

Refer to fig. 1.



1 Description

Refer to fig. 1 on page 13.

- 3 Adjustable, detachable 5-inch (125-mm) gooseneck for precise microphone positioning.
- 4 Removable microphone arm holder for placing the microphone to the left or right of your mouth
- 5 Microphone cable strain relief.

1.5 C 520



- For 9 to 52 V universal phantom power.
- 10-ft. (3-m) plug-in connecting cable with phantom power adapter with integrated 3-pin XLR connector and switchable bass rolloff (6) (-4 dB at 100 Hz).

Fig. 1a: Phantom power adapter with bass rolloff switch (6).

1.6 C 520 L

- For use with the B 29 L battery power supply, MPA V L phantom power adapter, or PT 40 or PT 400 transmitters.
- 5-ft. (1.5-m) plug-in connecting cable with 3-pin mini XLR connectors.

2 Interfacing



The C 520 /C 520 L is a condenser microphone and therefore needs a power supply.

2.1 Introduction

Using any power supply other than those recommended by AKG may damage your microphone and will void the warranty.



2.2 C 520

- Connect the phantom power adapter on the microphone cable to a balanced XLR microphone input with phantom power.
- Switch the phantom power on. (Refer to the instruction manual of the unit to which you connected your C 420.)
- Plug the mini XLR connector on the microphone cable all the way into one of the two mini XLR sockets on the B 29, the mini XLR socket on the connecting cable of the MPA II, or the input socket on the bodypack transmitter. The connector will lock automatically.

2.3 C 520 L 2.3.1 B 29 L or MPA V L

 To disconnect the cable, press the unlocking button on the mini XLR connector and pull the connector out of the socket. Disconnecting the cable:

 To avoid damaging the cable, never pull at the cable itself! Important!

B 29 L: Connect the B 29 L to the desired input.
 MPA V L: Connect the MPA V L to a balanced
 XLR microphone input with phantom power
 and switch the phantom power on.



3.1 Mounting the Microphone Arm on the Left or Right

As delivered, the microphone arm is fitted on the right side of the behind-the-neck headband. To mount the microphone arm on the left side of the headband:

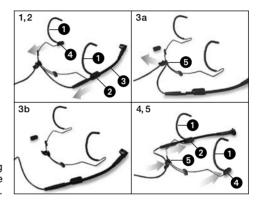


Fig. 2: Removing the microphone arm.

Refer to fig. 2.

- 1. Pull the microphone arm holder (2) with the microphone arm (3) from the temple piece (1) in the direction of the arrow.
- 2. Remove the cover (4) from the other temple piece.
- 3. Remove the cable from the cable holder (5).
- 4. Insert the microphone arm holder (2) and the cover (4) all the way into the respective wire loop below the opposite temple piece (1). (The cover (4) stabilizes the temple piece and prevents your hair from getting caught in the wire loop.)
- 5. Press the cable back into the cable holder (5).





3.1 Putting the Microphone on

 Put the behind-theneck headband on as shown in figs. 3 through 5.



Figs. 3 to 5: Putting on and tightening the headband.

Should the microphone fit loosely, you may bend the behind-the-neck headband and the temple pieces inward:





Fig. 6: Bending the headband and temple pieces to fit.

- Hold the headband or temple piece firmly at the points marked in fig. 6 and bend inward with extreme care.
- Check whether the microphone fits better. If it does not, bend the wire some more, again with extreme care.

Refer to fig. 6.



Note:

 Both the headband and temple pieces are made of spring steel wire. If you bend the wire too hard it may be extremely difficult to bend the wire back to the desired shape.

3.3 Aligning the Microphone

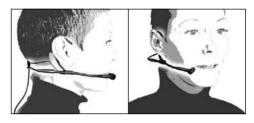


Fig. 7: Adjusting the gooseneck.

Refer to fig. 7.

 Adjust the gooseneck so as to point the microphone at the corner of your mouth.

3.4 Adjusting the Microphone Arm

20

0


Fig. 8: Adjusting the microphone arm.

Refer to fia. 8.

1. Unsnap the gooseneck (1) from the holder (2).

Snap the gooseneck

 back into the
 holder (2) at the
 desired position.





 Never try to shift the gooseneck inside the holder. This would damage the gooseneck and/or holder.







- To clean the microphone surface, use a soft cloth moistened with water.
- Clean the foam windscreen in mild soap suds.
 You can use the windscreen again as soon as it has dried

4.1 Microphone Surface

4.2 Windscreen



5 Troubleshooting


Problem	Possible Cause	Remedy	
No sound:	Power to mixer and/or amplifier is off. Channel or master fader on mixer, or volume control on amplifier is at zero.	Switch power to mixer or amplifier on. Set channel or master fader on mixer or volume control on amplifier to desired - level	
	Microphone is not connected to mixer or amplifier.	Connect microphone to mixer or amplifier.	
	Cable connectors are seated loosely.	Check cable connectors for secure seat.	
	5. Cable is defective.	Check cable and re- place if damaged.	
	6. No supply voltage.	6. Switch phantom power on. Phantom power supply: connect to power outlet or insert battery (batteries). Check cable and replace if necessary.	
Distortion:	Gain control on the mixer set too high. Mixer input sensitivity too high.	Turn gain control down CCW. Connect a 10-dB preattenuation pad between microphone cable and input.	
C 520 L: Also read the transmitter and receiver manuals!			

6 Specifications VdB

Type:	pre-polarized condenser microphone
Polar pattern:	cardioid
Frequency range:	20 Hz to 20,000 Hz
Sensitivity:	7 mV/Pa ≙ -43 dBV re 1 V/Pa
Electrical Impedance at 1000 Hz:	200 ohms
Recommended load impedance:	≥ 2000 ohms
Max. SPL for 1% / 3% THD:	126 dB / 130 dB
Equivalent noise level:	33 dB (to IEC 60268-4)
Supply voltage:	C 520: 9 to 52 V universal phantom power C 520 L: 9 V battery supply through B 29 L or bodypack transmitter, or 9 to 52 V uni- versal phantom power through MPA V L adapter
Current consumption:	approx. 2 mA
Cable length/Connector:	C 520: 3 m (10 ft.) / 3-pin male XLR C 520 L: 1.5 m (5 ft.) / 3-pin mini XLR
Finish:	matte black
Size:	130 mm (5.2 in.) in dia.
Net/shipping weight:	C 520: 30 g/540 g (1.1/19.1 oz.) C 520 L: 30 g/471 g (1.1/16.6 oz.)

This product conforms to the standards listed in the Declaration of Conformity. To order a free copy of the Declaration of Conformity, visit http://www.akg.com or contact sales@akg.com.

Frequency Response

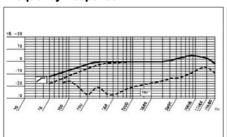

Polar Diagram

